

Vanera Room & Corridor Lighting

Vanera is ideal for use as both a bedhead and corridor light, giving medical-quality safety (EN60598) & performance at a competitive price.

Unobtrusive Design

Blending effortlessly into the background of a room or corridor, Vanera leaves an architect plenty of space to work with.

Whereas bedhead models are always wall mounted, corridor models can be either wall or ceiling mounted to better distribute their light output.

Quality & Safety

The quality manufacture of Vanera is backed-up by EN 60598 test certification.

This certificate requires extensive electrical testing to ensure the units are safe for use in a medical environment, where even small electrical shocks can be lethal to prone patients.

Lighting Control System


Ideal for both corridors and patient rooms, Vanera uses advanced reflectors & prismatic to produce homogenous and comfortable light.

Wide-angle distribution ensures light is projected over the maximum possible area of a corridor or patient room.

Shadows and glare are reduced by the unique wide-angle light diffusion of Vanera. This also makes the light suitable for low (<2.30m) ceiling installations, such as ward refurbishments.



Bedhead and Corridor versions are available. Corridor versions can be either ceiling (pictured) or wall mounted.

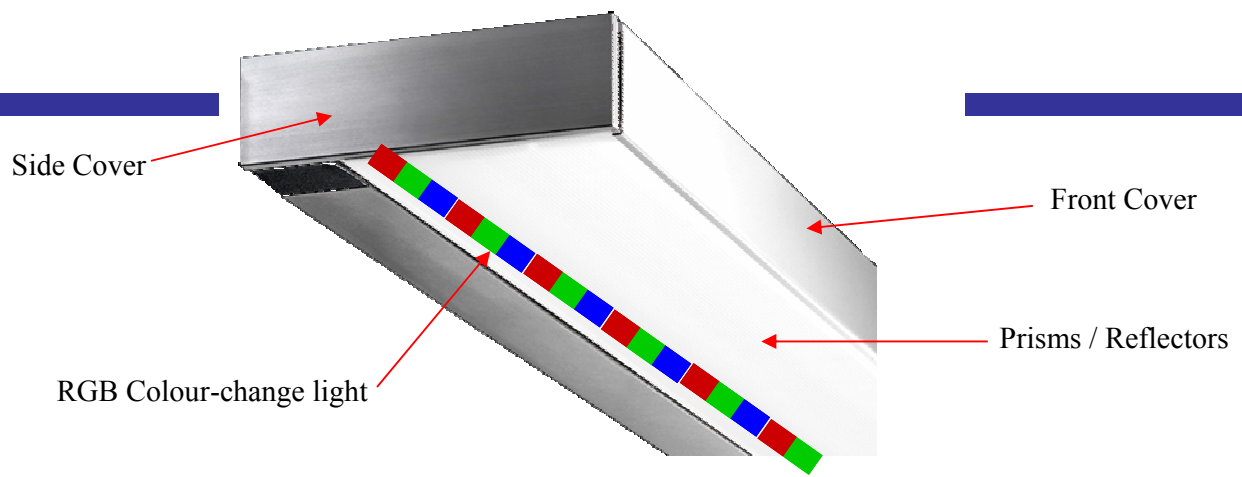

High-End Vs Eco-Models

With so many different options available, it is possible to customize your light to either a High-End or Eco-Model depending on your budget.

Where a High-End model may include an aluminium cover, 2 reflectors for up and down lighting, the LED colour-change facility, a separate night-light and a DALI interface (see below) an Eco-Model can make considerable cost savings by omitting many of these features. A plastic front cover can be substituted, or if only one reflector is used omitted completely to allow more illumination. The modular construction of the unit makes this possible.


Toolbox

An extra “toolbox” can be added to the Vanera to give added capabilities such as:

- DALI (Digital Addressable Lighting Interface) Light Networks
- Spotlights
- Power Sockets



DALI Interface

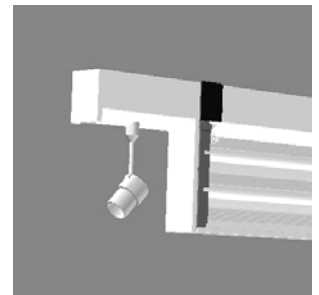

Spotlight

For a full part number guide please visit the “Medical Room Lighting” section of our website

www.brandon-medical.com

Brandon Medical Co Ltd
Holme Well Road
Leeds (UK)
LS10 4TQ

Tel: 0113 277 7393
Fax: 0113 272 8844

Email: enquiries@brandon-medical.com
Web: www.brandon-medical.com

